 


# USE AND CARE GUIDE

---

## INTERIOR VANITY

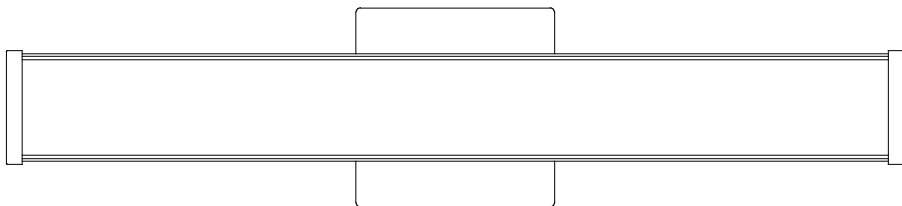

# Table of Contents

Table of Contents .....	2	Tools Required .....	3
Safety Information .....	2	Hardware Included .....	3
Warranty .....	2	Package Contents .....	4
What is Covered .....	2	<b>Installation .....</b>	<b>5</b>
What is Not Covered .....	2	<b>Care and Cleaning .....</b>	<b>7</b>
Pre-Installation .....	3	<b>Troubleshooting .....</b>	<b>7</b>
Planning Installation .....	3		

## Safety Information



**WARNING:** Carefully read and understand the information given in this manual before beginning the assembly and installation. Failure to do so could lead to electric shock, fire or other injuries which could be hazardous or even fatal.



**WARNING:** Be sure the electricity to the wires you are working on is shut off. Either remove the fuse or turn the circuit off.

**NOTICE:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTICE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Warranty

### WHAT IS COVERED

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling.

### WHAT IS NOT COVERED

This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear.

The manufacturer does not warrant and specifically disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit HAMPTONBAY.COM.

# Pre-Installation

 
## PLANNING INSTALLATION

Read all instructions before assembly. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.



**NOTE:** Keep your receipt and these instructions for proof of purchase.

## TOOLS REQUIRED

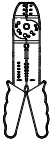

Wire Strippers



Safety Goggles



 
Ladder



Gloves



Flathead Screwdriver



Phillips Screwdriver



Electrical Tape




Wire Cutters

## HARDWARE INCLUDED



 **NOTE:** Hardware not shown to actual size.

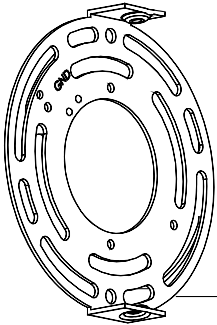

AA



BB



CC




DD

Part	Description	Quantity
AA	Mounting Plate (117mm long)	1
BB	Outlet Box Screw (15 mm long)	2
CC	Ground Screw	1
DD	Wire Connector	3

# Pre-Installation (continued)
 
## PACKAGE CONTENTS

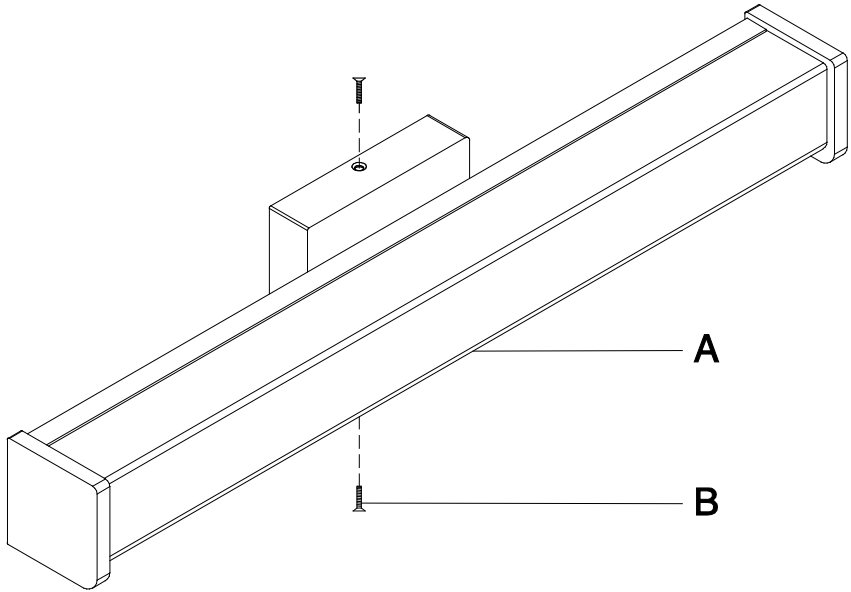

Part	Description	Quantity
A	Fixture Body	1
B	Set Screw (15 mm)	2




**CAUTION:** The fixture body (A) is one piece. Do not disassemble it.

# Installation

 
## 1 Attaching the mounting plate to the outlet box

- Place the mounting plate (AA) in front of the outlet box (sold separately). Make sure the two horizontal edges of the mounting plate (AA) are facing up/down.
- Ensure the wires from the outlet box are either inside the outlet box, or through the hole in the center of the mounting plate (AA).
- Place the outlet box screws (BB) through the long oval holes on the mounting plate (AA) and use a Philips screwdriver to screw the outlet box screws (BB) into the appropriate screw holes on the outlet box.

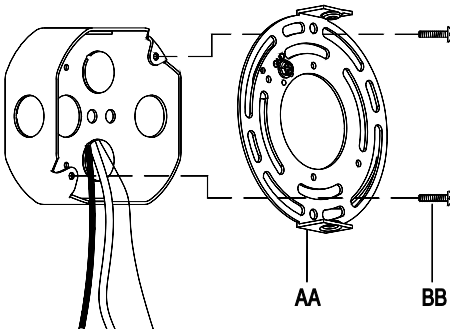

## 2 Connecting the electrical wires

 
- Wrap the middle of the ground wire from the fixture around the ground screw (CC) on the mounting plate (AA). Use a wire connector (DD) to connect the end of the ground wire from the fixture to the ground wire from the outlet box.
- Use a wire connector (DD) to connect the white wire from the fixture to the white wire (neutral wire) from the outlet box.
- Use a wire connector (DD) to connect the black wire from the fixture to the black wire (live wire) from the outlet box.
- Wrap the three wire connections with electrical tape for a more secure connection.
- Position the wires inside the outlet box.

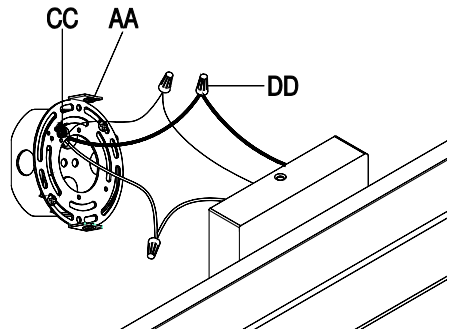


## Installation (continued)

### 3 Securing the fixture to the mounting plate

 
- Place the fixture body (A) against the mounting plate (AA).
- Use a Philips screwdriver to screw a set screw (B) through the hole on the top of the fixture body (A) and through the hole on the top of the mounting plate (AA).
- Use a Philips screwdriver to screw a set screw (B) through the hole on the bottom of the fixture body (A) and through the hole on the bottom of the mounting plate (AA).

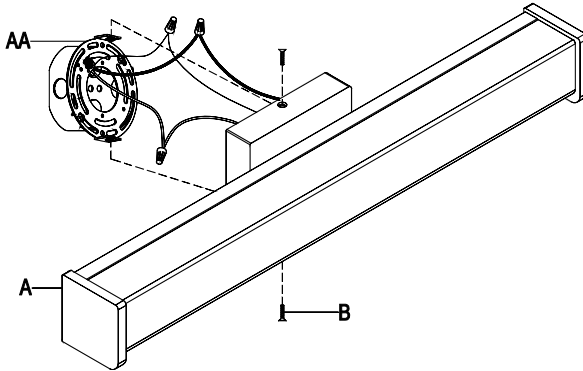

 **CAUTION:** The fixture body (A) is one piece. Do not disassemble it.

### 4 Selecting the CCT option

 - Choose your preferred correlated color temperature (CCT) from the five options: 2700K warm white, 3000K soft white, 3500K neutral white, 4000K bright white, or 5000K daylight.
- Move the CCT switch on the fixture (A) to make your selection.

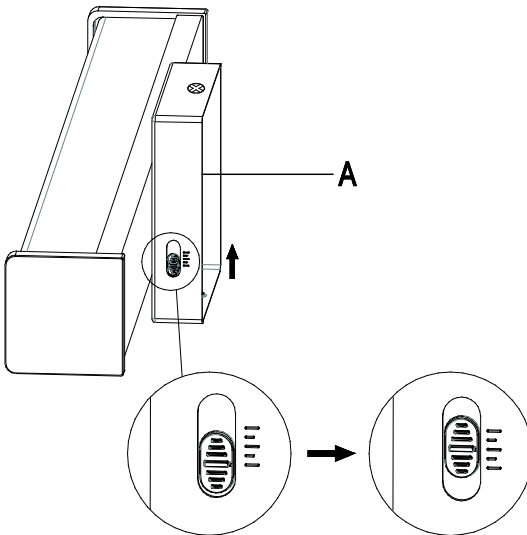

**NOTE:** The factory setting is 3000K, soft white light.

## Care and Cleaning



**CAUTION:** Before attempting to clean the fixture, disconnect the power to the fixture by turning the breaker off or removing the fuse from the fuse box.

- Clean the fixture with a soft, dry cloth.
- Do not use any cleaners with chemicals, solvents, or harsh abrasives.

## Troubleshooting

Problem	Possible Cause	Solution
The fixture will not light.	The power is off.	Ensure the power supply is On.
	The circuit breaker is off.	Ensure the circuit breaker is in the On position.
The fuse blows or circuit breaker trips when the light is turned on.	The wires are crossed or the power wire is grounding out.	<ul style="list-style-type: none"><li><input type="checkbox"/> Check the wire connections.</li><li><input type="checkbox"/> Contact a qualified electrician or call the Customer Service Team at 1-855-HD-HAMPTON.</li></ul>