



## Accessory

Code	C	H	P	Q	Y
Picture					
Name	Butterfly Drywall Anchor	Wire Nut	Screw	Square Plate	Male Quick Connector (5 Holes)


### pre-installation Disassemble luminaire as shown below

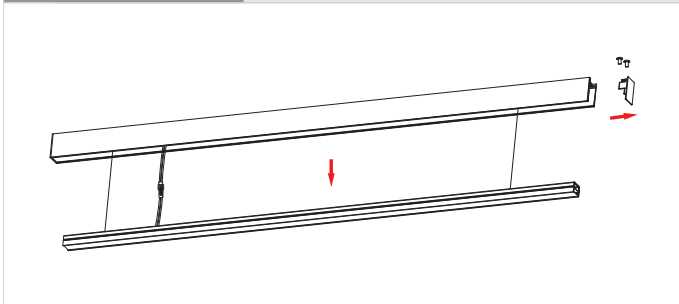

### Step 1 Prepare mounting point in the ceiling

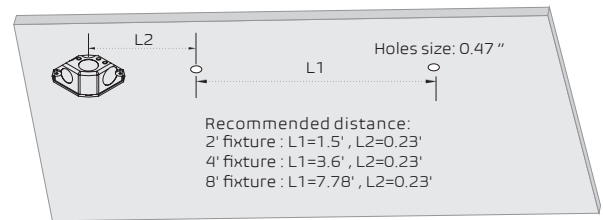


### Step 2 Mount plate and wiring

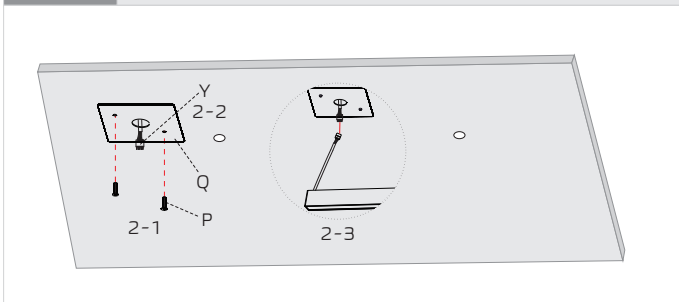


- 2-1: Cover the junction box with square plate "Q", and fix it with screw "P".  
 2-2: Plug in AC wires, dimming wires and ground wire into the male quick connector (5holes) "Y" according to label instructions.  
 2-3: Plug in the male and female connector together, hide all wires into the junction box.



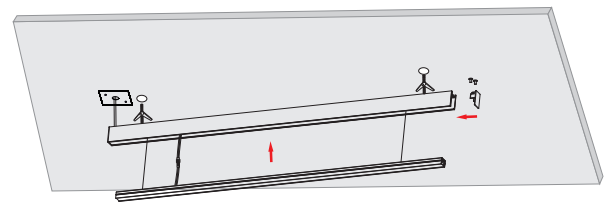



### Step 3 Screw the housing in the ceiling




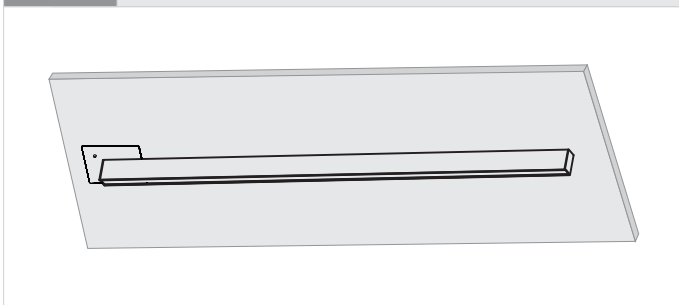


- 3-1: Fix the housing in the ceiling with butterfly drywall anchor "C" (Fix the housing with screws if wooden frame ceiling).  
 3-2: Press the led modular into housing and secure end cap by screw.

### Step 4 Complete




Accessory						
Code	C	H	P	Q	N	Y
Picture						
Name	Butterfly Drywall Anchor	Wire Nut	Screw	Square plate	Silicone Seal	Male quick connector (5 holes)


Joiner options			
"—" Joiner	"L" Joiner	"T" Joiner	"+" Joiner
			

▲ Noted: Silica gel stopper "N" is used to seal seams that may appear at both ends of luminaires when multiple connections.


▲ It needs 2 inputs if using joiner "T" and "+".

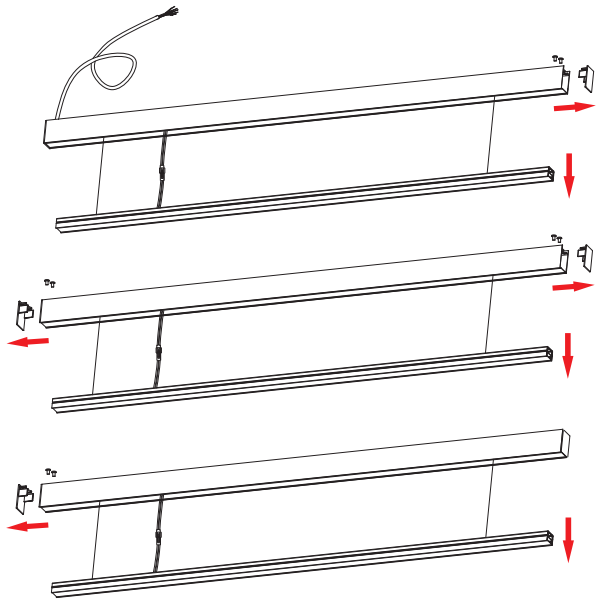Pre-installation	Disassemble luminaires as shown below
<p><b>Start of run (SoR):</b> Remove the end cap without power code, and take the LED module out.</p>	
<p><b>Middle of run (MoR):</b> Remove both end caps, and take the LED module out.</p>	
<p><b>End of run (EoR):</b> Remove the end cap with power code, and take the LED module out.</p>	

## A. Line Connection

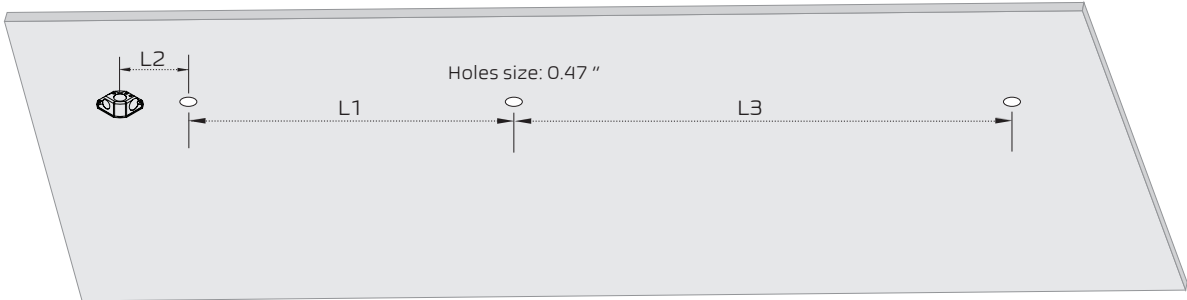
Step 1	Prepare mounting point in the ceiling									
										
<table border="0"> <tr> <td>2' fixture: L1=1.5'</td> <td>4' fixture: L1=3.6'</td> <td>8' fixture: L1=7.78'</td> </tr> <tr> <td>L2=0.23'</td> <td>L2=0.23'</td> <td>L2=0.23'</td> </tr> <tr> <td>L3=2.09'</td> <td>L3=4.19'</td> <td>L3=8.37'</td> </tr> </table>		2' fixture: L1=1.5'	4' fixture: L1=3.6'	8' fixture: L1=7.78'	L2=0.23'	L2=0.23'	L2=0.23'	L3=2.09'	L3=4.19'	L3=8.37'
2' fixture: L1=1.5'	4' fixture: L1=3.6'	8' fixture: L1=7.78'								
L2=0.23'	L2=0.23'	L2=0.23'								
L3=2.09'	L3=4.19'	L3=8.37'								

## Step 2 Mount plate and wiring

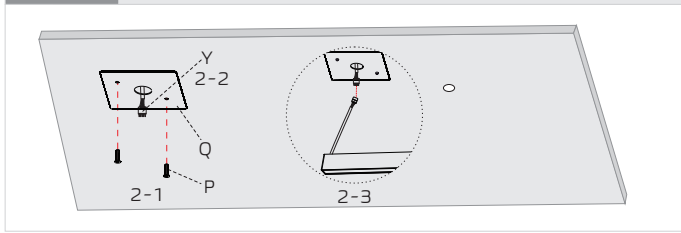


- 2-1: Cover the junction box with square plate "Q", and fix it with screw "P".
- 2-2: Plug in AC wires, dimming wires and ground wire into the male quick connector (5holes) "Y" according to label instructions.
- 2-3: Plug in the male and female connector together, hide all wires into the junction box.

## Step 3 Install the housing and joiner – SoR

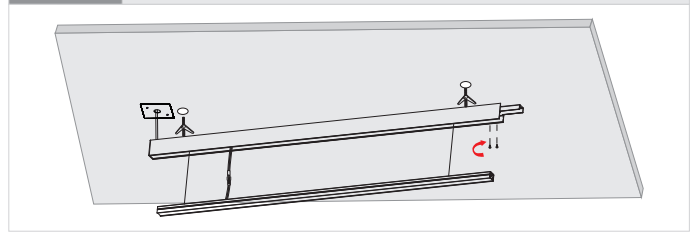


- 3-1: Fix the housing in the ceiling with butterfly drywall anchor "C"  
(Fix the housing with screws if wooden frame ceiling).
- 3-2: Insert the joiner"—" into the SoR housing and fix it by screws.

## Step 1 Repeat install and Join steps – MoR to EoR

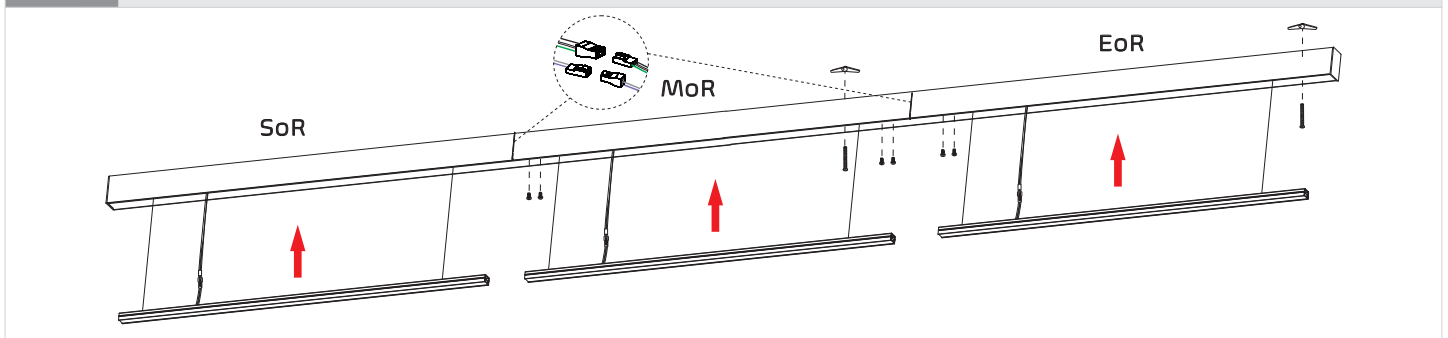


- 4-1: Fix the housing in the ceiling with butterfly drywall anchor "C" in turn.
- 4-2: Insert the joiner"—" into the housing and fix it by screws in turn.
- 4-3: Connect the quick connectors properly.
- 4-3: Insert all the led modules into the housing from SoR to EoR in turn.

## Step 1 Complete

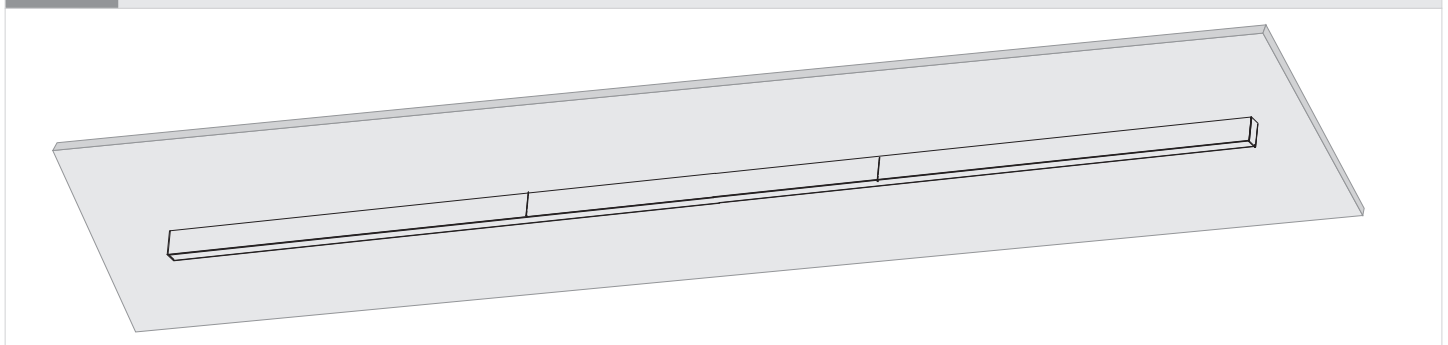


## 42' Diffuser Lens Roll

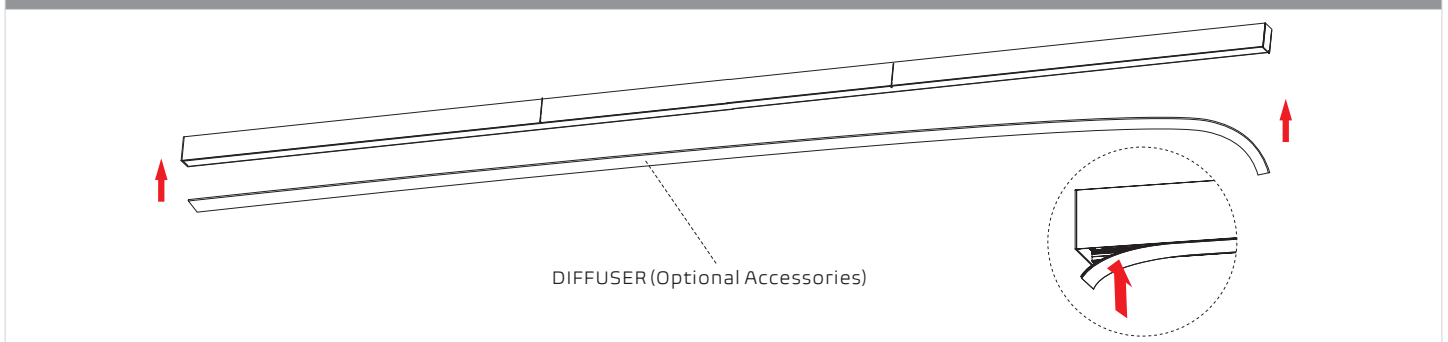


## B. L Shape Connection

- ▲ For T shape, X shape or other geometric shapes, all subject to the L shape installation
- ▲ It needs 2 inputs if using joiner "T" and "+".


### pre-installation Disassemble luminaire as shown below

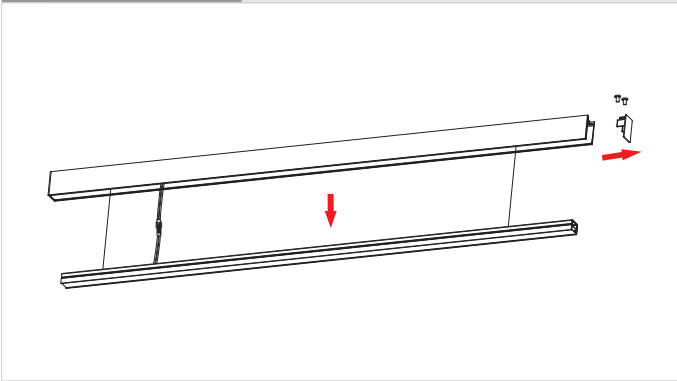

### Step 1 Make hole in the ceiling

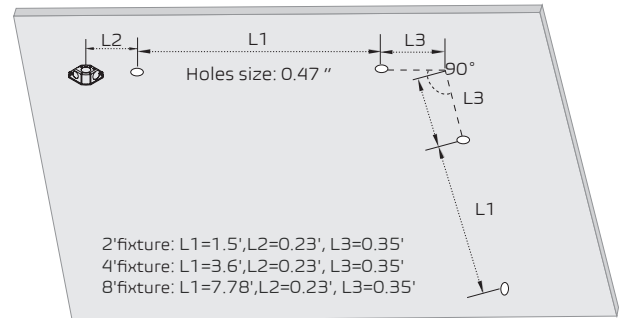


### Step 2 Mount plate and wiring

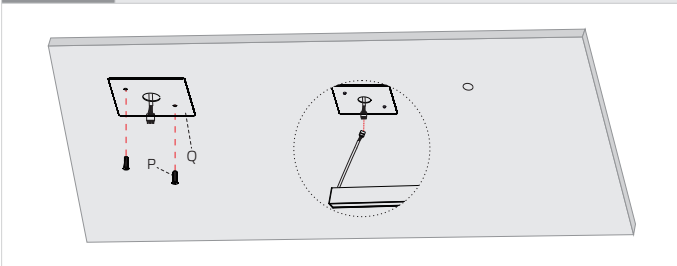


- 2-1: Cover the junction box with square plate "Q", and fix it with screw "p".
- 2-2: Plug in AC wires, dimming wires and ground wire into the male quick connector (5holes) "Y" according to label instructions.
- 2-3: Plug in the male and female connector together, hide all wires into the junction box.

### Step 3 Install the housing and joiner – SoR

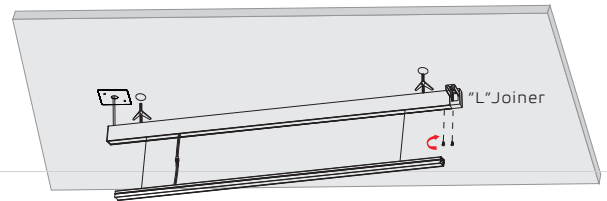

- 3-1: Fix the housing in the ceiling with butterfly drywall anchor "C" (Fix the housing with screws if wooden frame ceiling).
- 3-2: Insert the joiner "L" into the SoR housing and fix it by screws.

### Step 4 Repeat install and Join steps – MoR to EoR

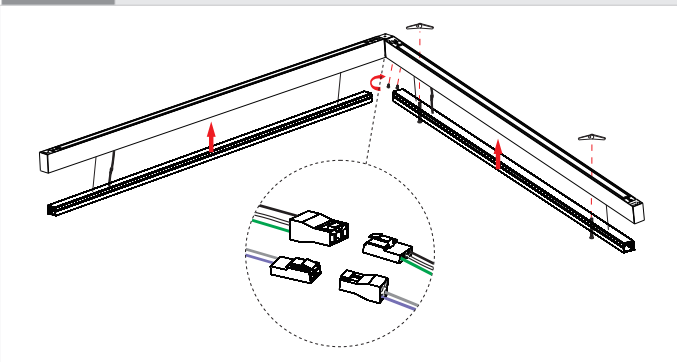

- 4-1: Fix the housing in the ceiling with butterfly drywall anchor "C" in turn.
- 4-2: Insert the joiner "—" into the housing and fix it by screws in turn.
- 4-3: Connect the quick connectors properly.
- 4-4: Insert all the LED modules into the housing from SoR to EoR in turn.

### Step 5 Complete

